

180mm


Installation Instruction and Drilling Hole Template

Installation Procedure

shown as figures which are for the left-unlocking door.

(if right-unlocking door, opposite)

1. Drill holes according to the dimension described on the left figure before installation.
2. Fit the Cabinet Lock to the door by passing the spindle through the hole.
3. Now secure the lock by threading the large nut onto the spindle.
4. Fit one of the upper fixing bolts to suit your door thickness.
5. Tighten the lower fixing nut and upper bolt.

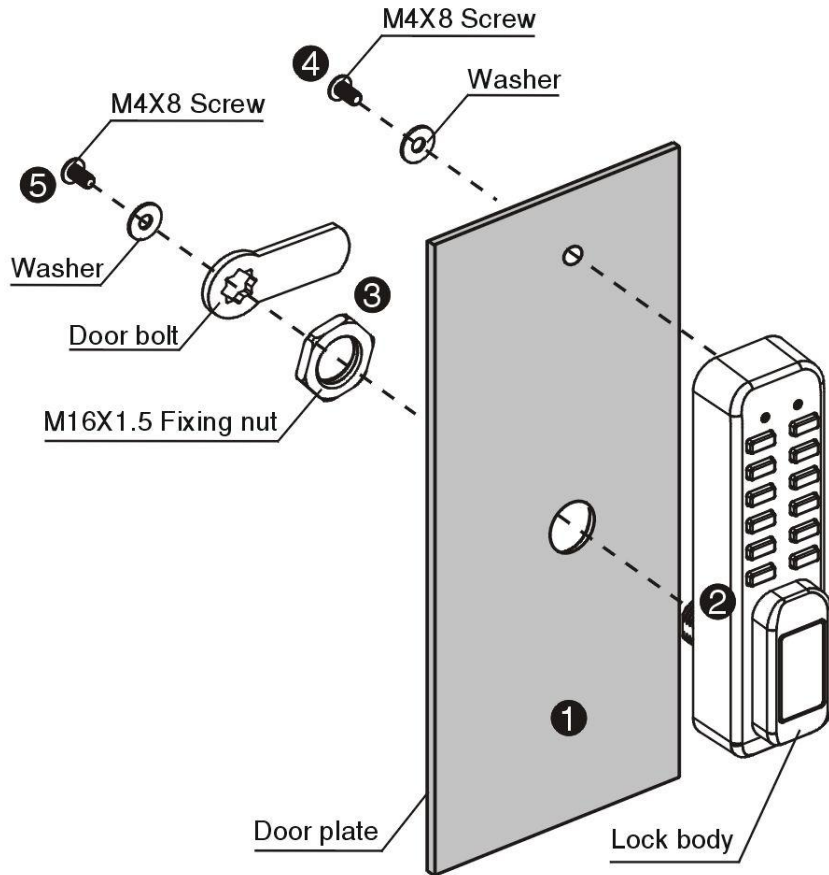

Scale: 1:1
Unit: mm(inch)

